





Fitting Instructions for
Roof Rack FRFL3005
Suitable for:
Landrover Freelander


- 1.) Unclip front and rear covers to reveal bolts. Remove the bolts.

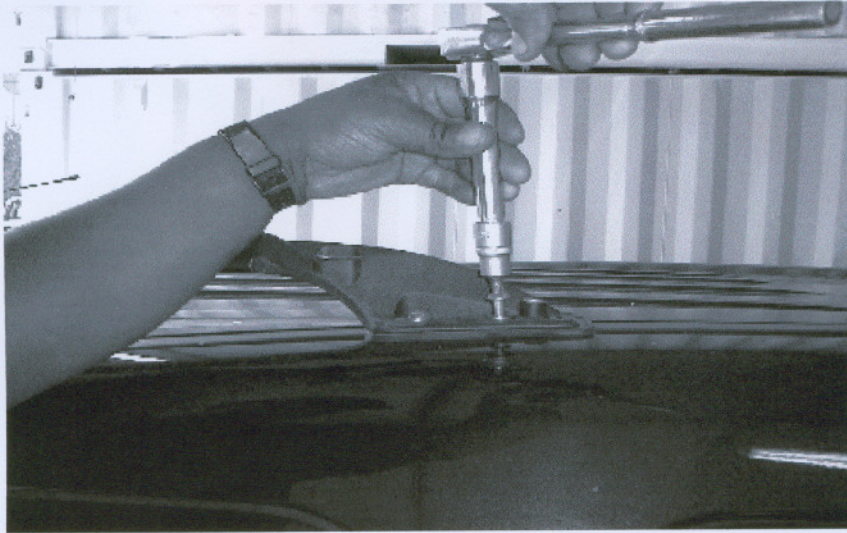

- 2.) The back feet are straight.

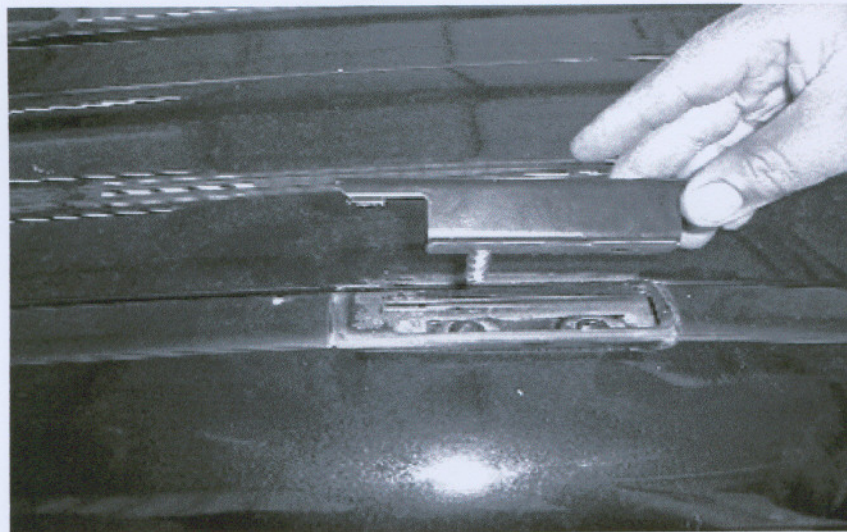


- 3.) The front feet are angled.

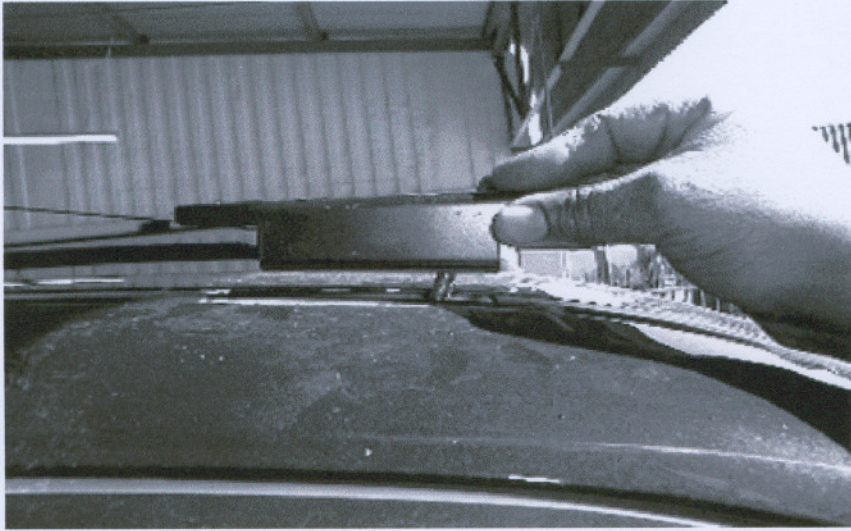


4.) Use the bolts and spring washers that are supplied with the Rhino Feet.

5.) Attach the upper half of the Rhino foot to the rack using the aluminium channel provided, and lower onto the feet already on the car.

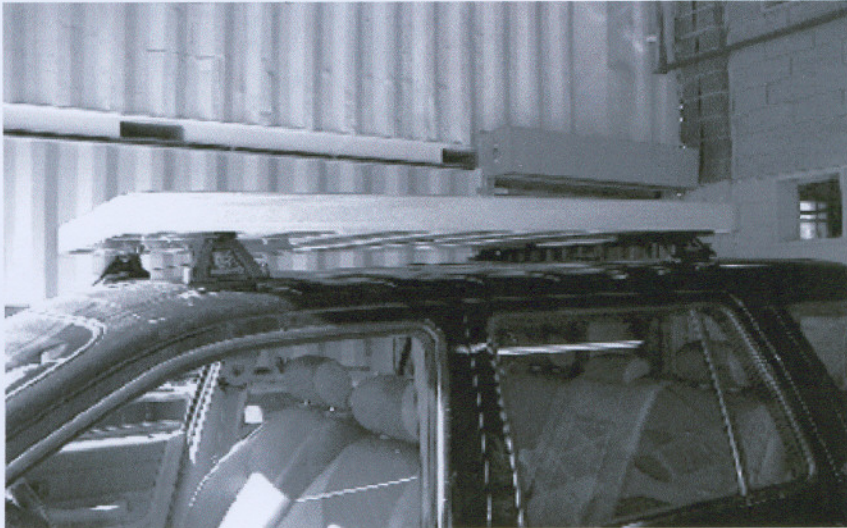

6.) Centre the rack and tighten the bolts all round.

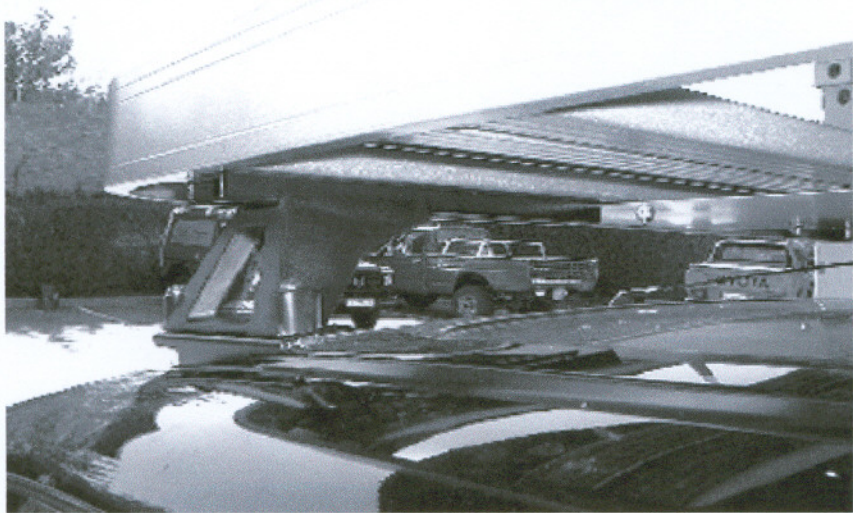

Copyright © April 2000 by Front Runner™
All rights reserved.
Website was Revised on 12 February 2003 04:32:17
WebMaster: **Chanse Turner** of
KaleidoScope WebDesign